



Wingo 4 User Manual

SETTING THE GAME VARIANT

The Wingo 4 supports both the 75-ball and 90-ball bingo game variants. Use the CLEAR button to select the desired game variant and confirm your selection by pressing SELECT.

JACKPOT FUNCTION (optional)

The display will show JP or 0 (or the previously selected number).

Press RECALL to increase the jackpot number. Press CLEAR to decrease the jackpot number. When the desired number is displayed, confirm by pressing SELECT. If you do not wish to use the jackpot function, leave the value set to 0.

STARTING A BINGO GAME

The game variant and optional jackpot number have now been set. Press SELECT to begin displaying numbers in random order. The most recently generated number will flash on the control display.

When the game is finished, press CLEAR twice. The bingo machine is now ready for the next round.

DURING THE GAME

By holding down the SELECT button, the next number can be viewed before it is shown to the players. When you release the SELECT button, the number will appear on the display.

To go back to a previously drawn number on the display, press RECALL. To continue the game, press SELECT.

WARRANTY

This electronic device is covered by a 2-year warranty period, effective from the invoice date. Any necessary repairs or replacements will be carried out free of charge.

The warranty does not cover damage resulting from improper use, accidents, or negligence. To make a warranty claim, please send an email to info@bingowinkel.nl within the warranty period, including a description of the issue.